
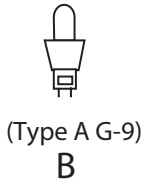


# Live Edge Floor Lamp

Part # L-LIVE EDGE FL XX-XX



21-1110

**PARTS**

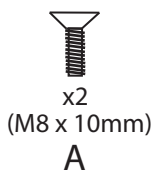


**OPTIONAL**

Due to the nature of wood components, some items may be loose in the mounting bracket due to expanding or contracting. Please use shims to minimize gap in bracket and ensure product is in upright level position.

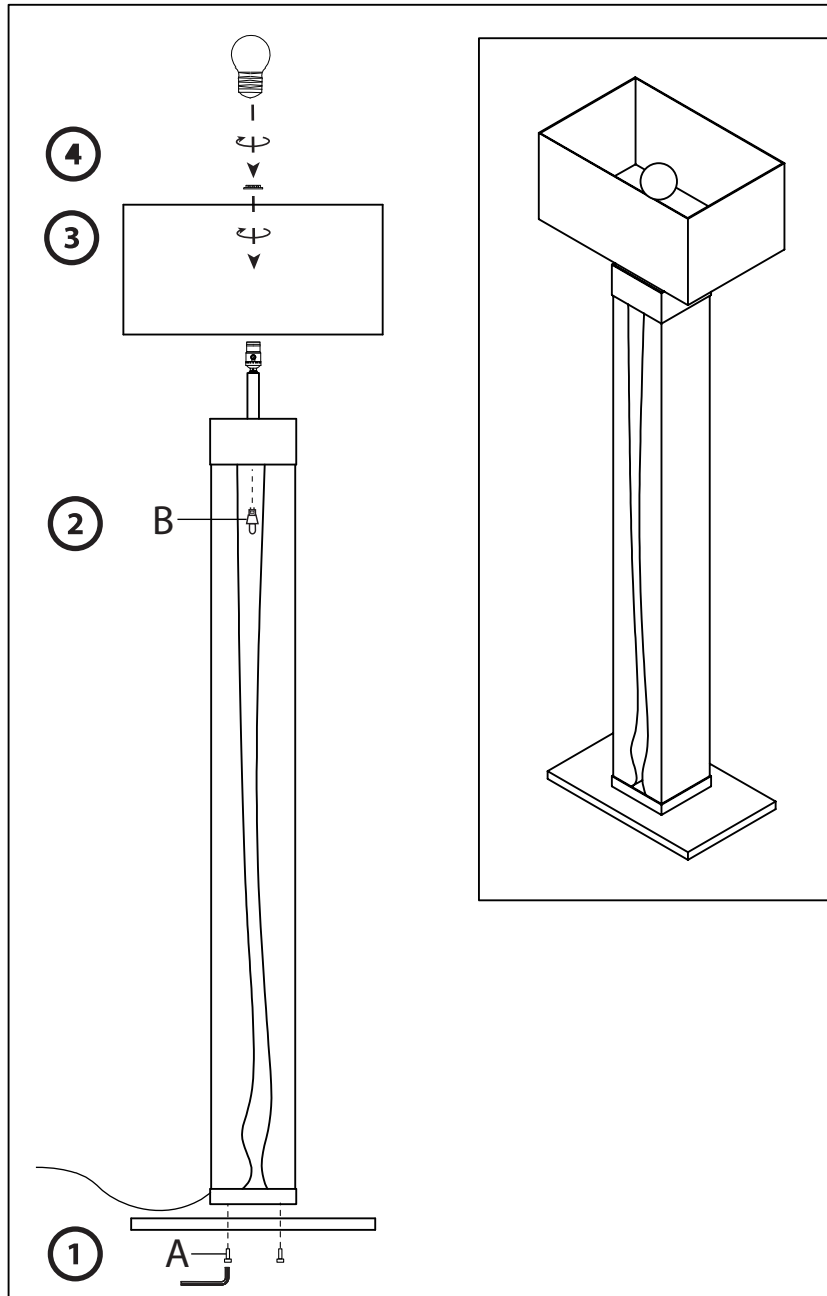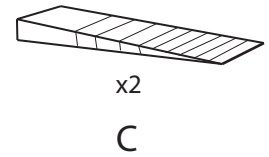

**OPTIONAL**

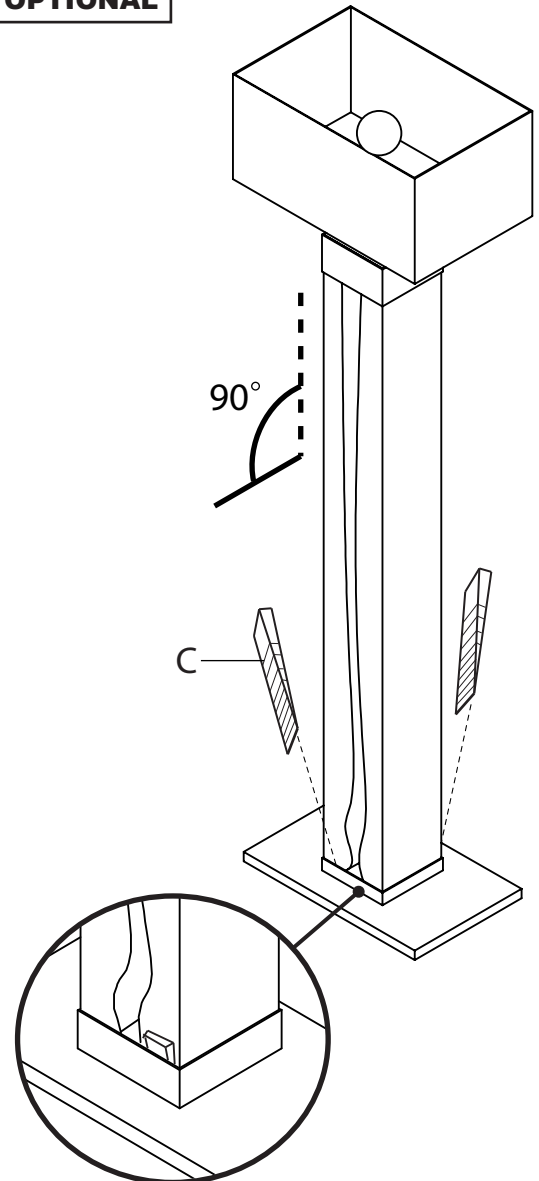

-Tap shim into place  
-Break shim off to desired height in bracket

**CAUTION**

For indoor use only. Keep out of reach of children and animals. Place on flat surface and away from flammable materials. Never operate this appliance if it has a damaged cord, plug or cable. Keep cord away from heated and/or damp areas. Use 150 WATT max. (or LED equivalent), Type A E26 Bulb only.



Do not over tighten.  
Do not use power tools to assemble.