 


Harper TV Stand

Part # TV-HARPER XX+XX

20-1215

 
PARTS

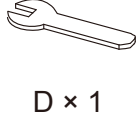




TOOLS



PARTS

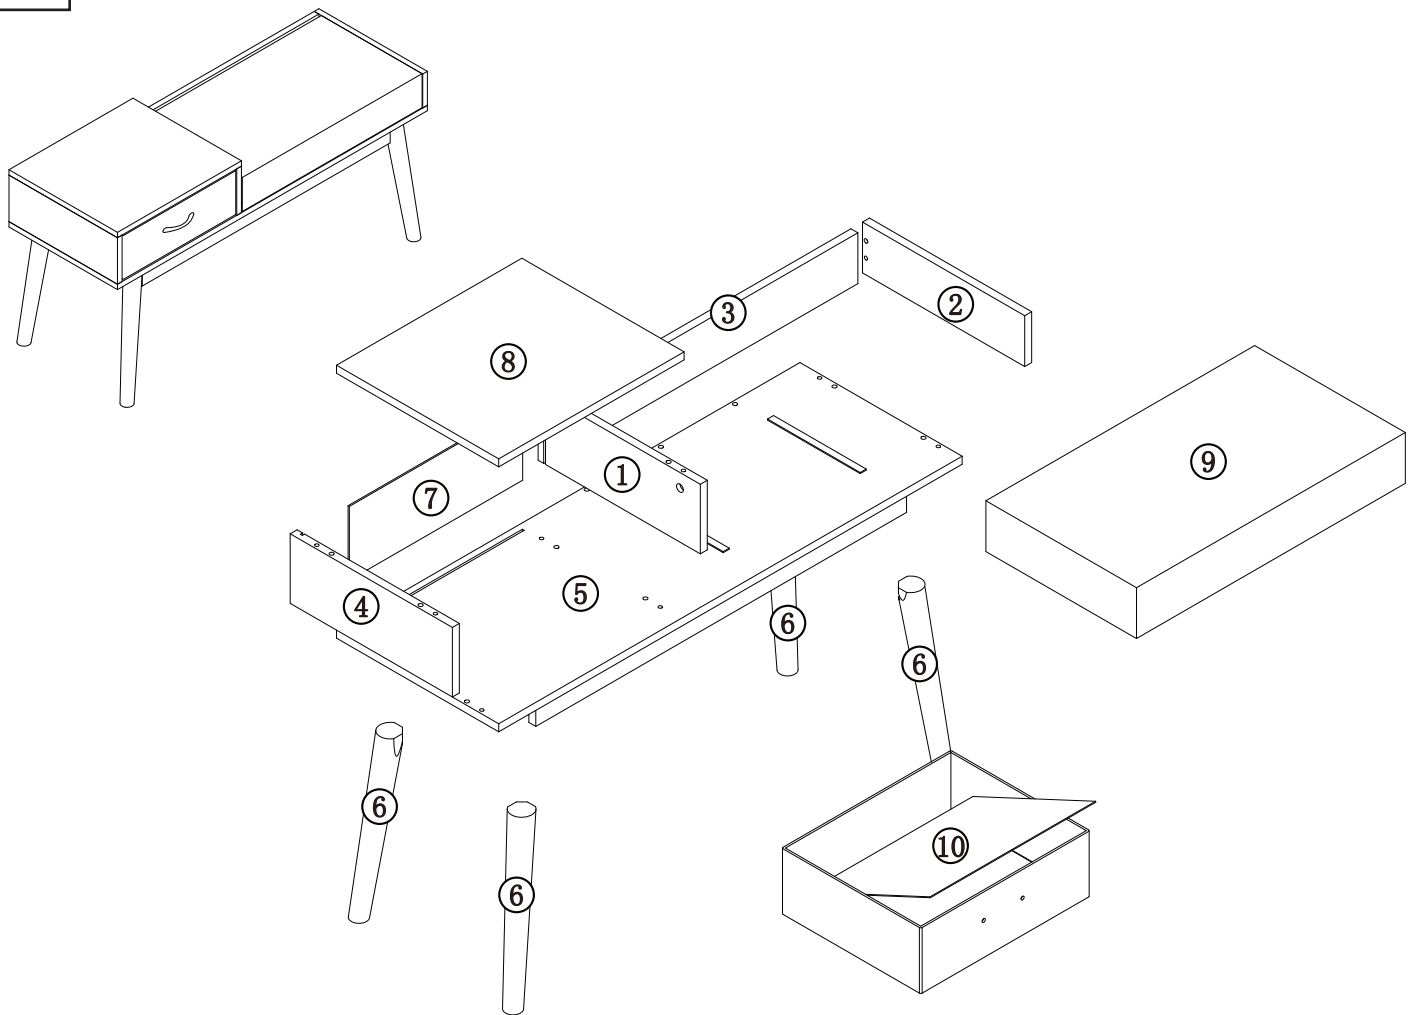


   Do not over tighten.
Do not use power tools to assemble.

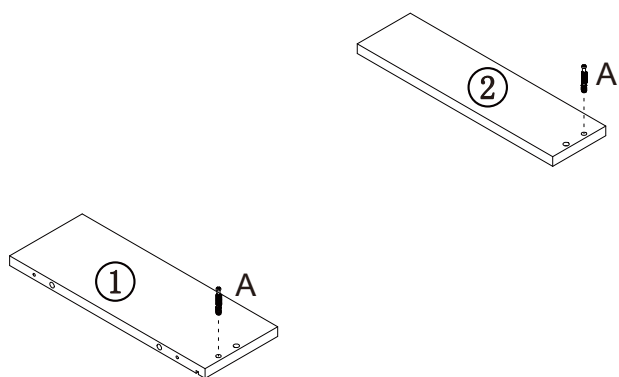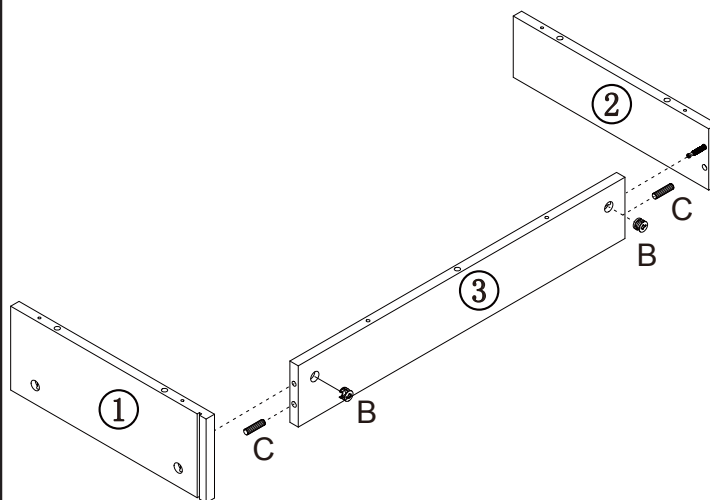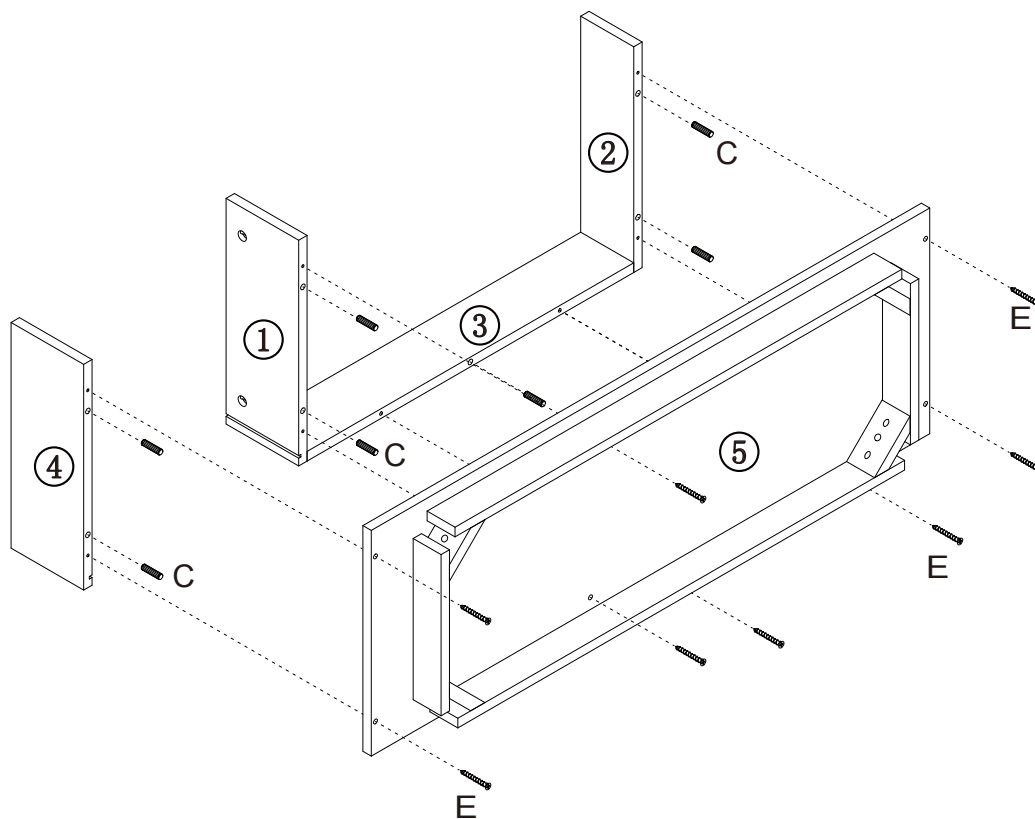
1**2****3**

Do not over tighten.
Do not use power tools to assemble.

 4


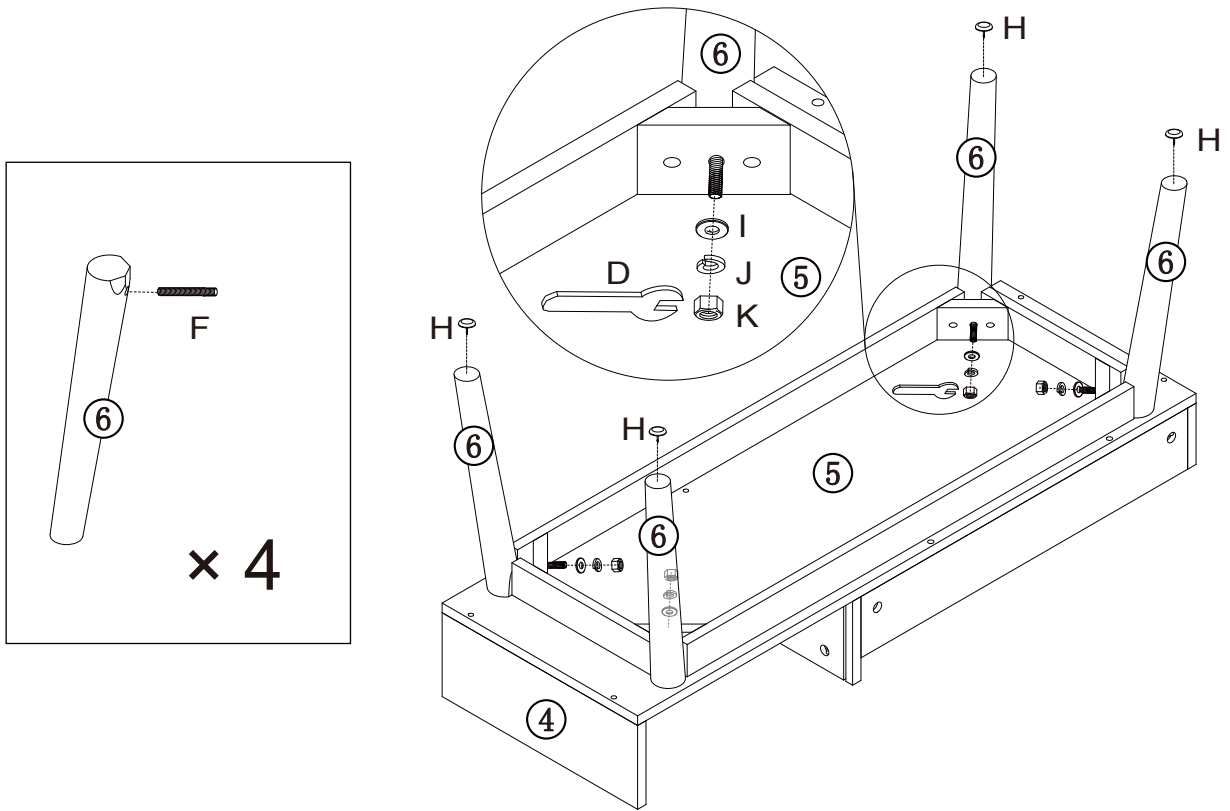


5

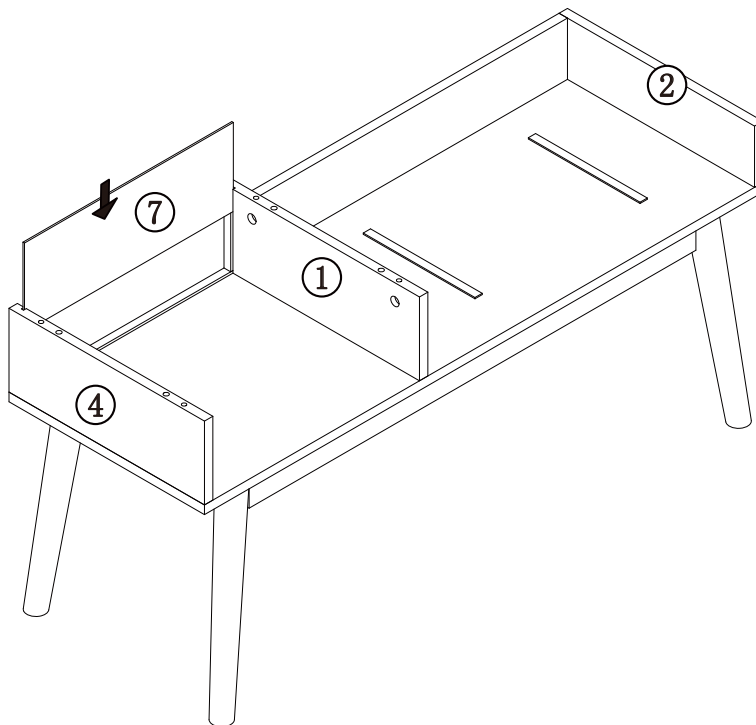 


Do not over tighten.
Do not use power tools to assemble.

  
6

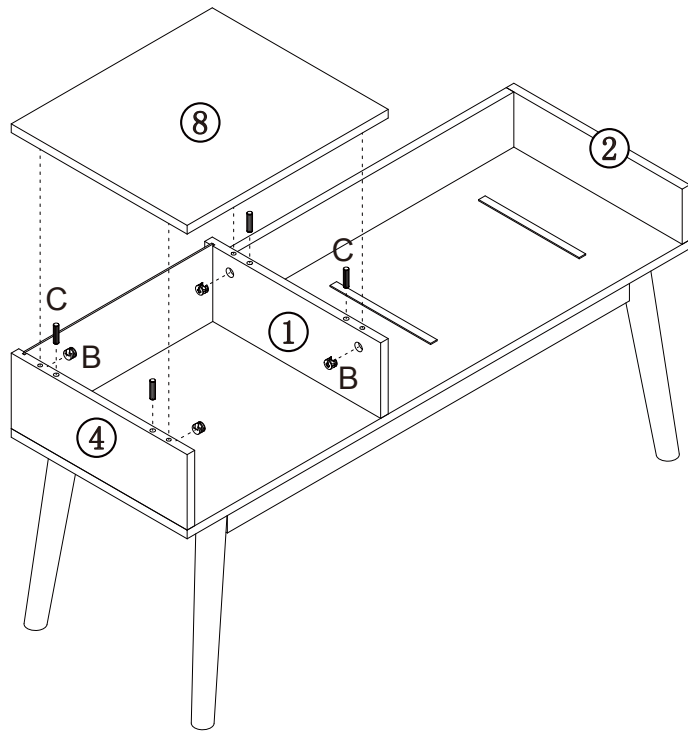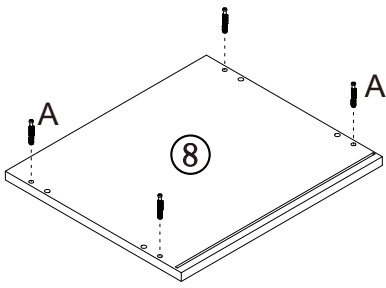

7

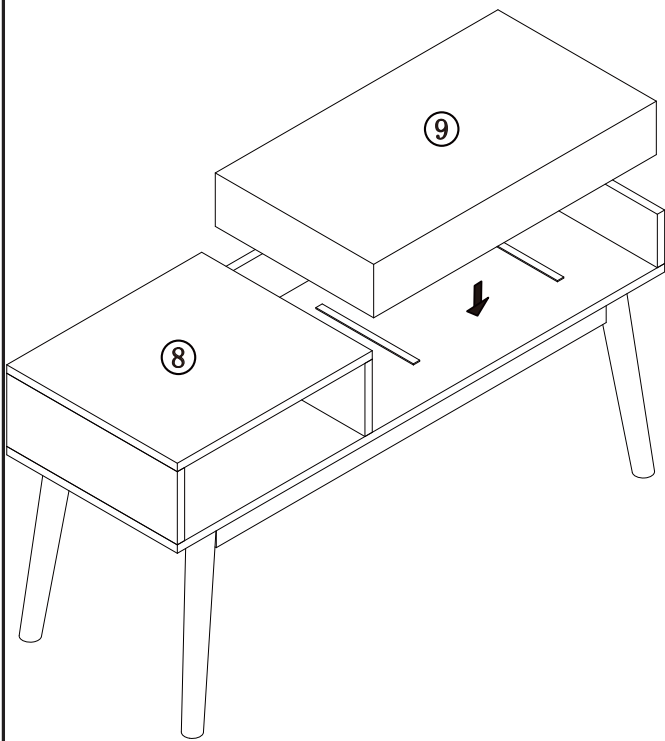 


8

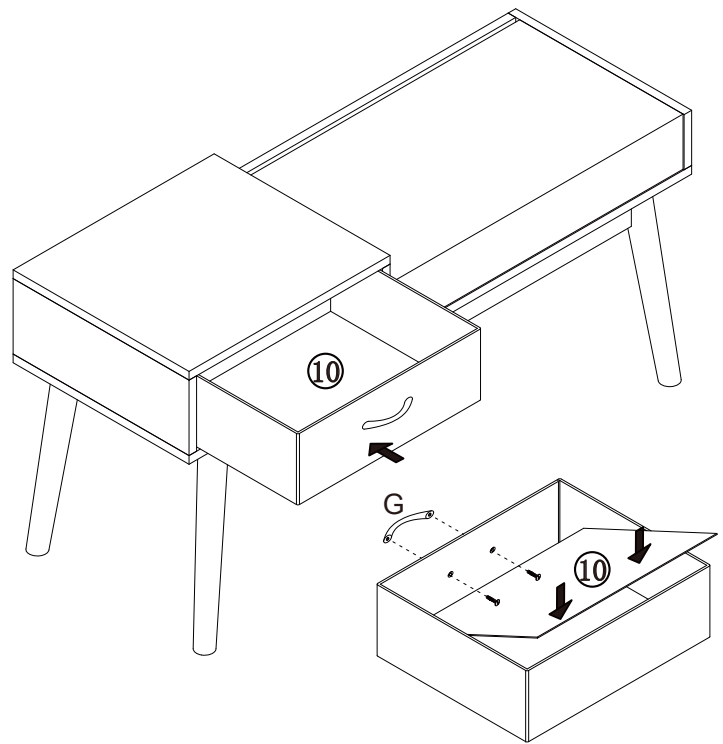 

Do not over tighten.
Do not use power tools to assemble.

 9

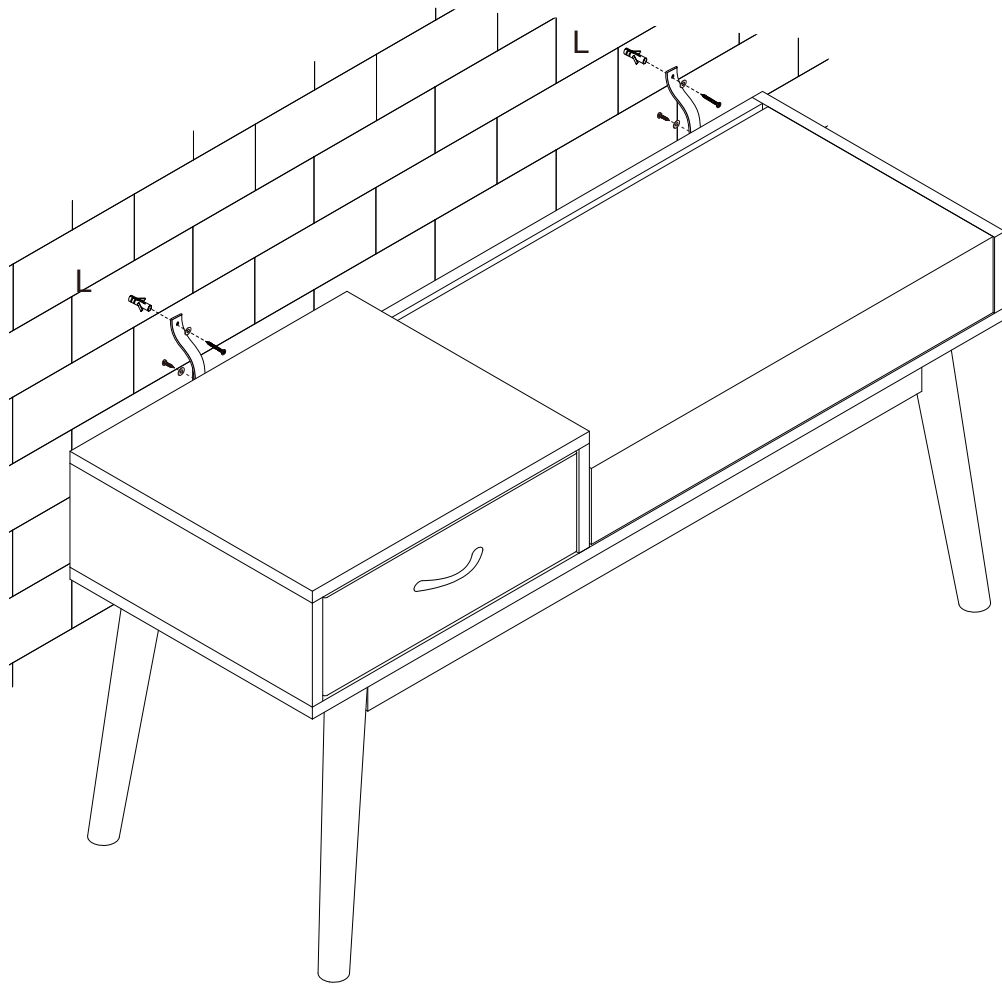

Do not over tighten.
Do not use power tools to assemble.