

Display Coffee Table

Part # CT-DISPLAY XX+XX

CT-DISPLAY-210622

PARTS



x8
(M6x35mm)
A



x8
(Ø15 x 12)
B



x4
C



x8
(M5x40mm)
D



x4
(M3.5x20mm)
E



x8
(M6x35mm)
F



x2
(M6x30mm)
G

 


x4
(M6x12mm)
H



4mm
I





PARTS

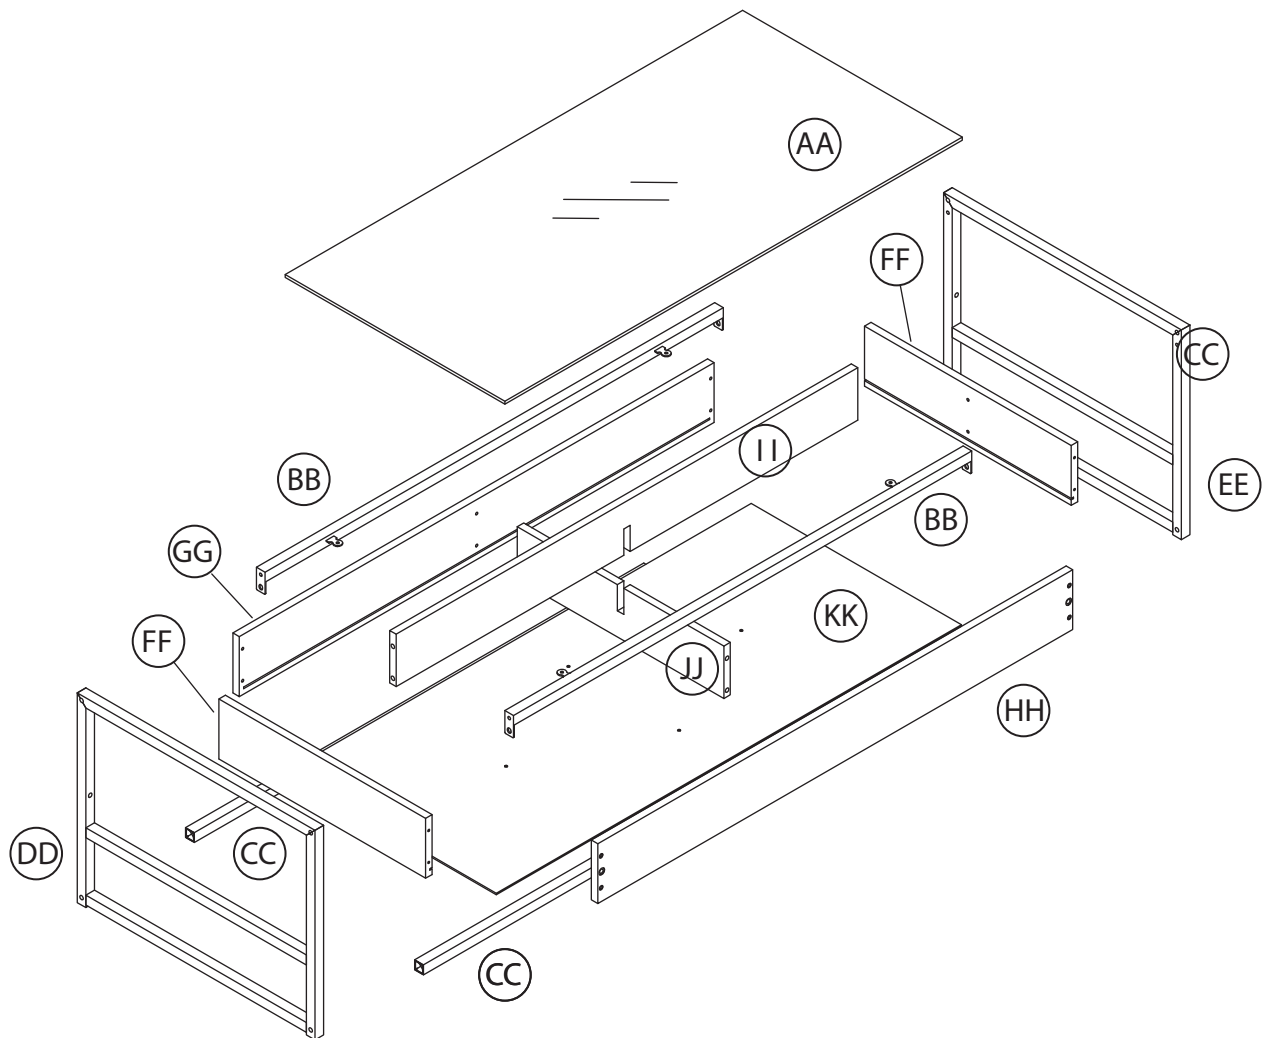

Do not over tighten.
Do not use power tools to assemble.

Part # CT-DISPLAY XX+XX

    CT-DISPLAY-210622

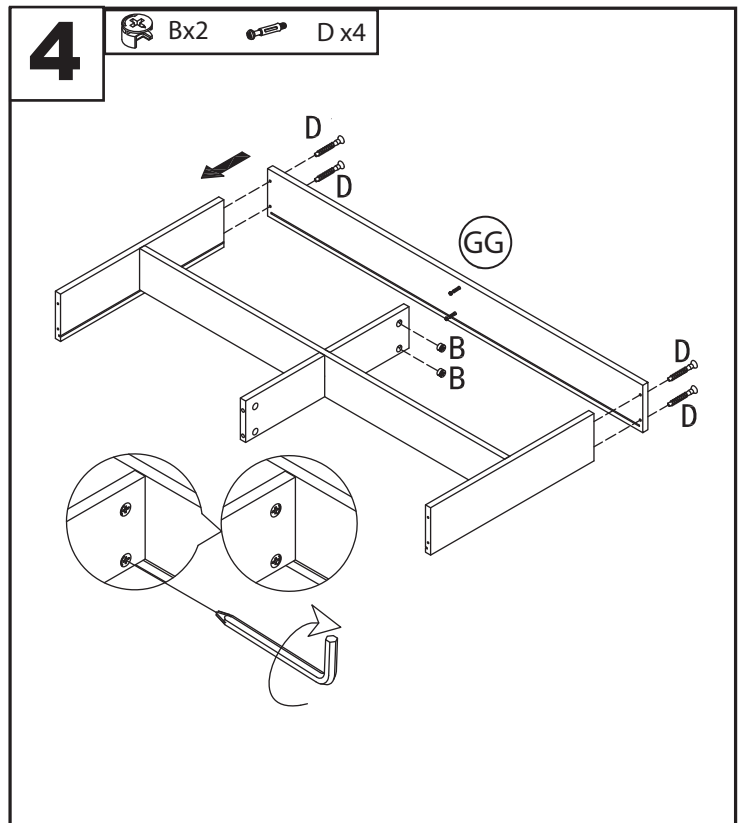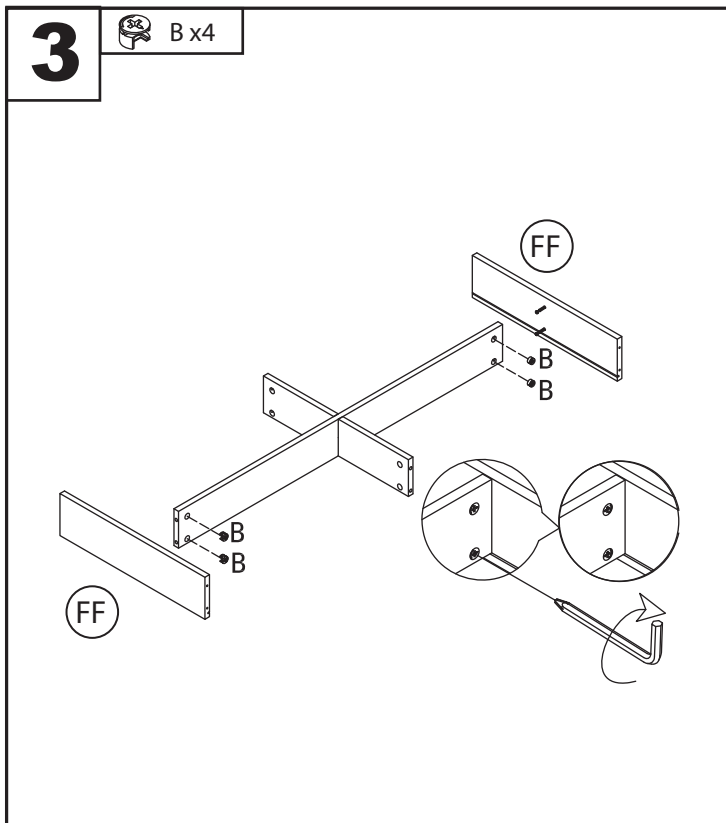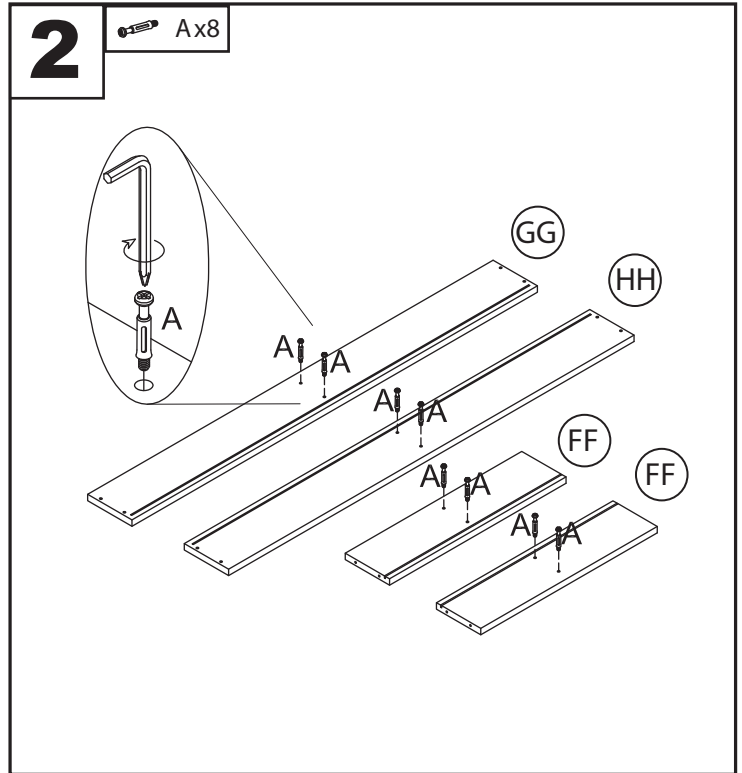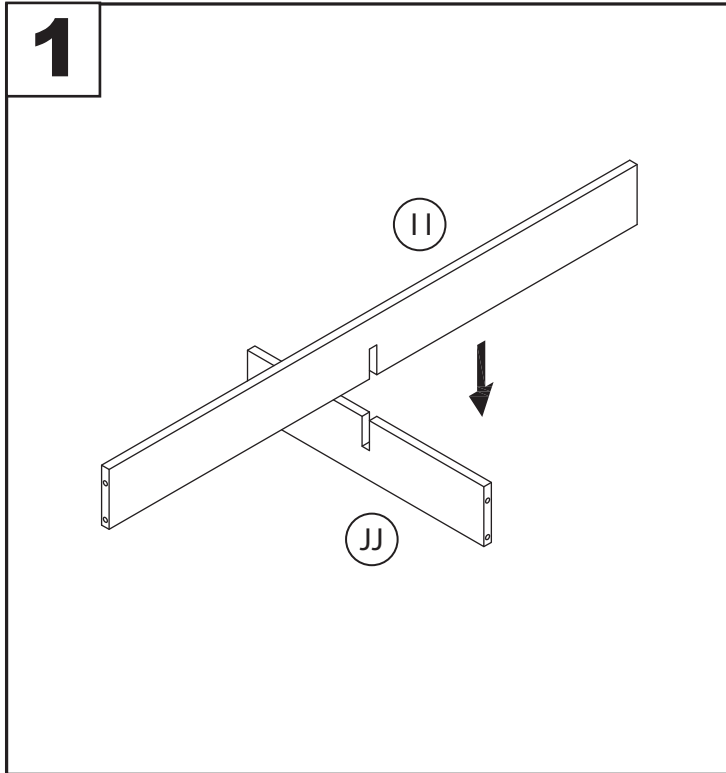


Do not over tighten.
 Do not use power tools to assemble.

Part # CT-DISPLAY XX+XX


CT-DISPLAY-210622

 5

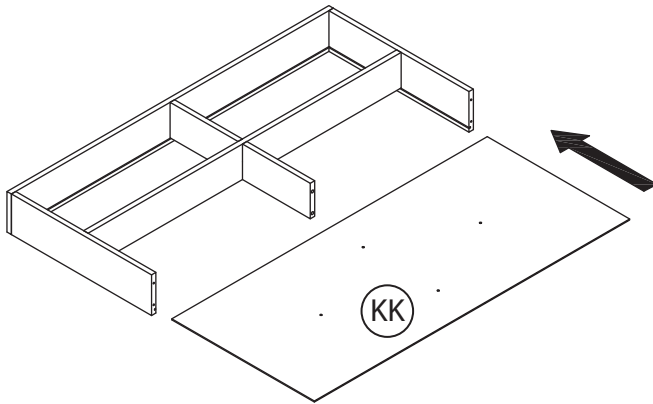


6

 B x2 D x4

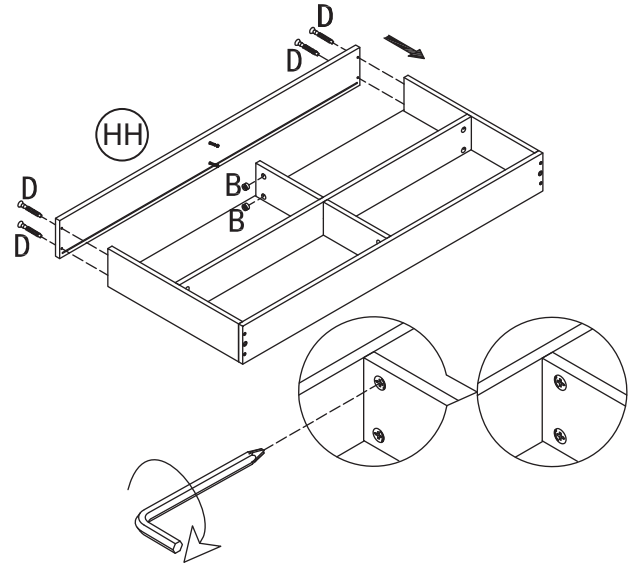


7

 E x4

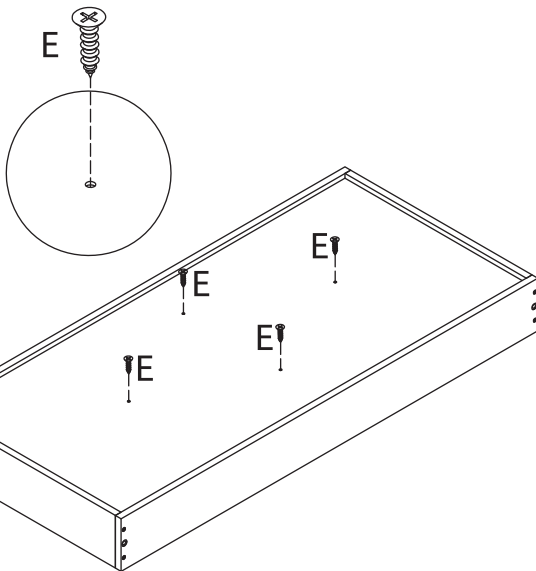

8

 F x8




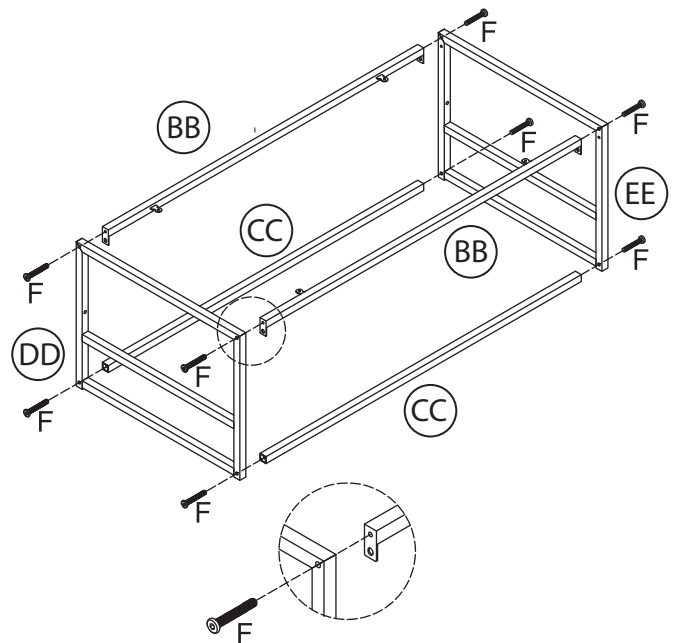


Do not over tighten.
Do not use power tools to assemble.

Display Coffee Table

Part # CT-DISPLAY XX+XX

    CT-DISPLAY-210622

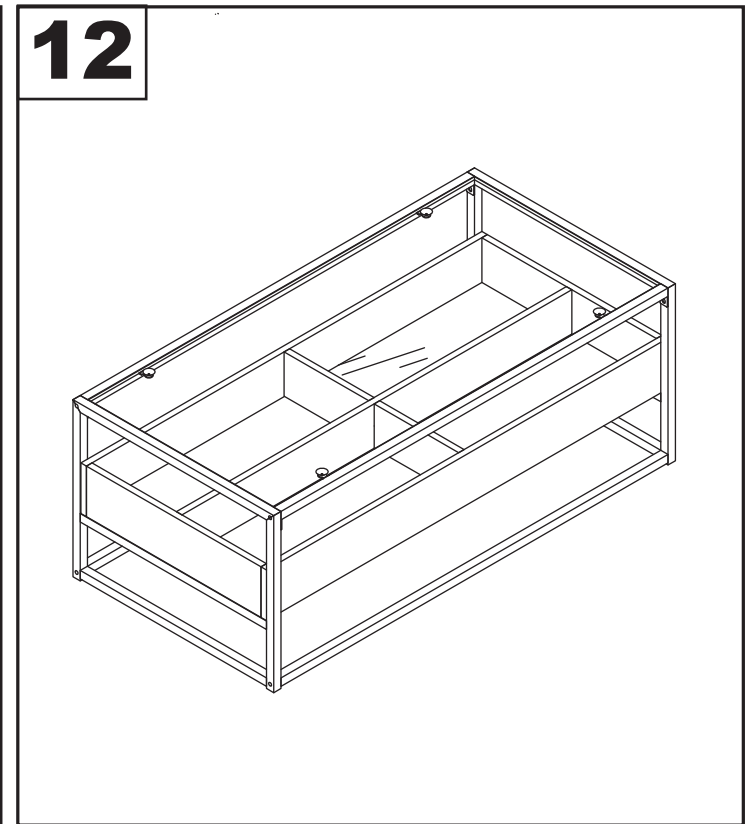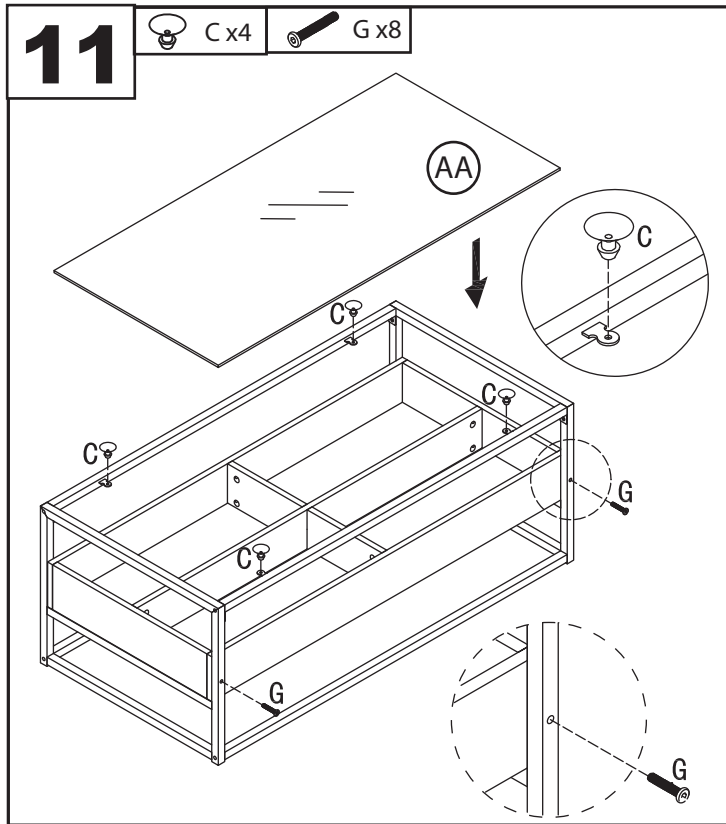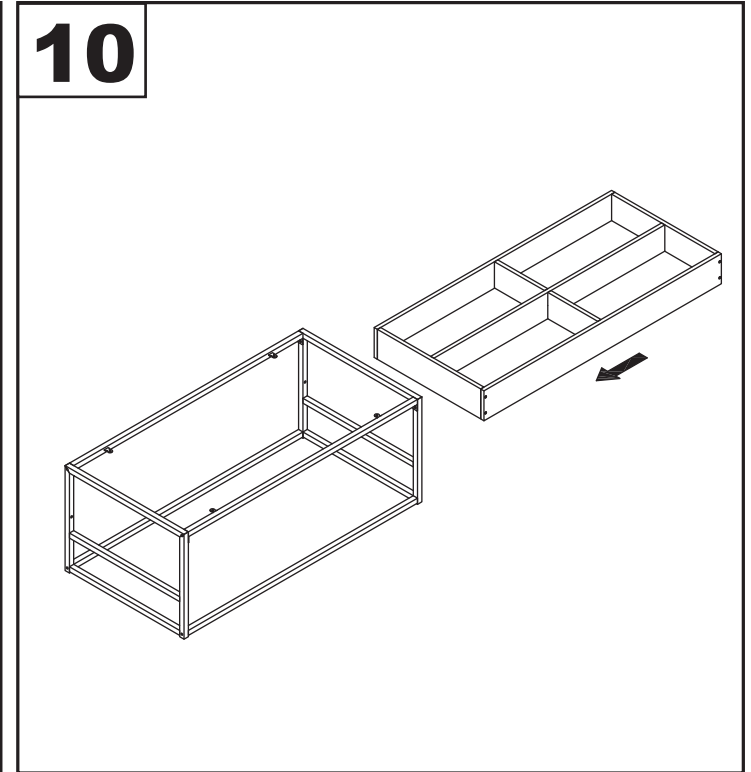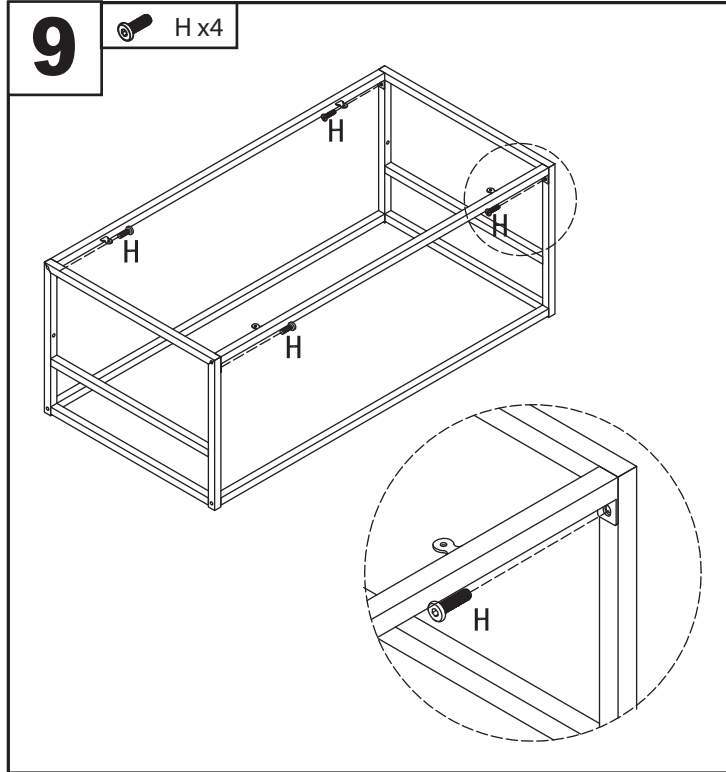

Do not over tighten.
 Do not use power tools to assemble.