


# Masters Office Chair

Part # OFC-AC-MSTR XX / OC-MSTR XX

21-0904

**PARTS**

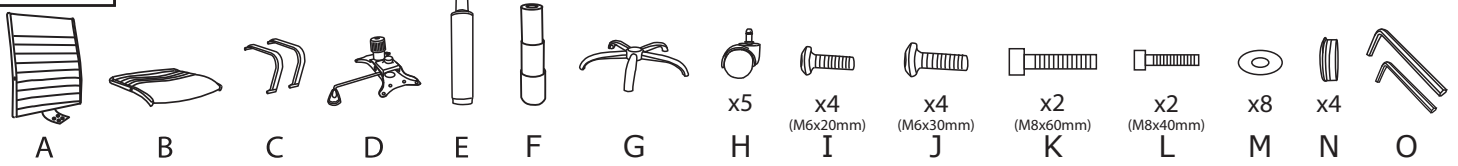

**1**

REMOVE BLACK CAP AND THROW AWAY

**2**

Front

**60%** tighten

**3**

**60%** tighten

Lay BACKREST (A) on ground and align holes of SEAT (B) to bracket

**4** Fasten ARMRESTS (C) to SEAT (B) first

**60%** tighten

**5**

Holes may be obscured by fabric

**Note:** Tighten all bolts

**100%** tighten

**6** Apply CAPS (Nx4) to cover bolts

SIT TO SECURE

Watch Our Assembly Video!

<https://www.youtube.com/watch?v=23L0w2H6zu4>



Do not over tighten.  
Do not use power tools to assemble.