


Part # OT-TRAY XX+XX


20-1026

**PARTS**


A

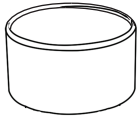


B

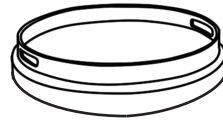


C

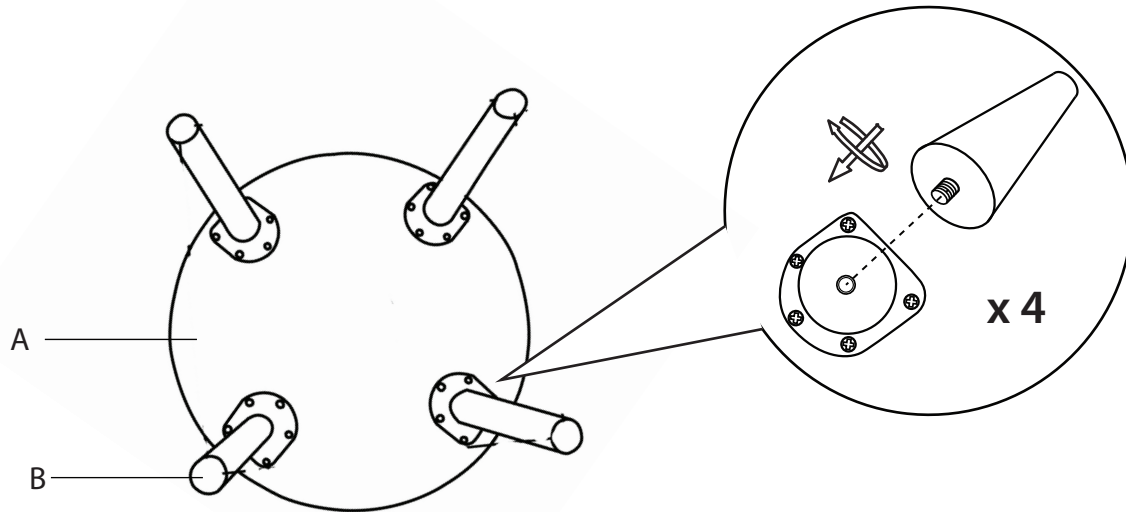**1****2a**

Cushion option

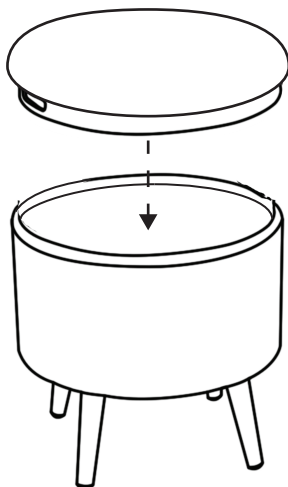**2b**

Tray option

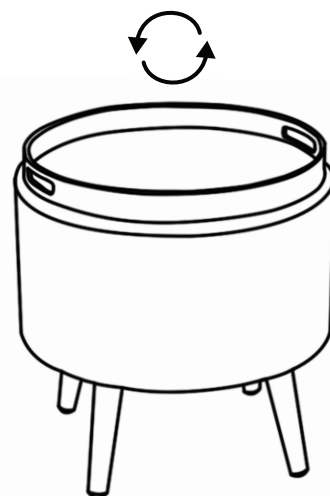

Do not over tighten.  
Do not use power tools to assemble.