


# Mara Upholstered Counter Stool


Part# B26-MARAUP XX+XX

B26-MARAUP 21-0714


**PARTS**

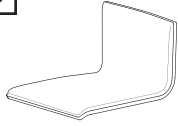

A

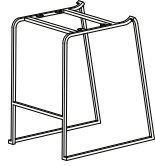


B



(M6 x20mm)

x2

C



(M6 x 35mm)

x2

D




x4

E



x4

F




G


**1**



Fasten all bolts in place before tightening 100%

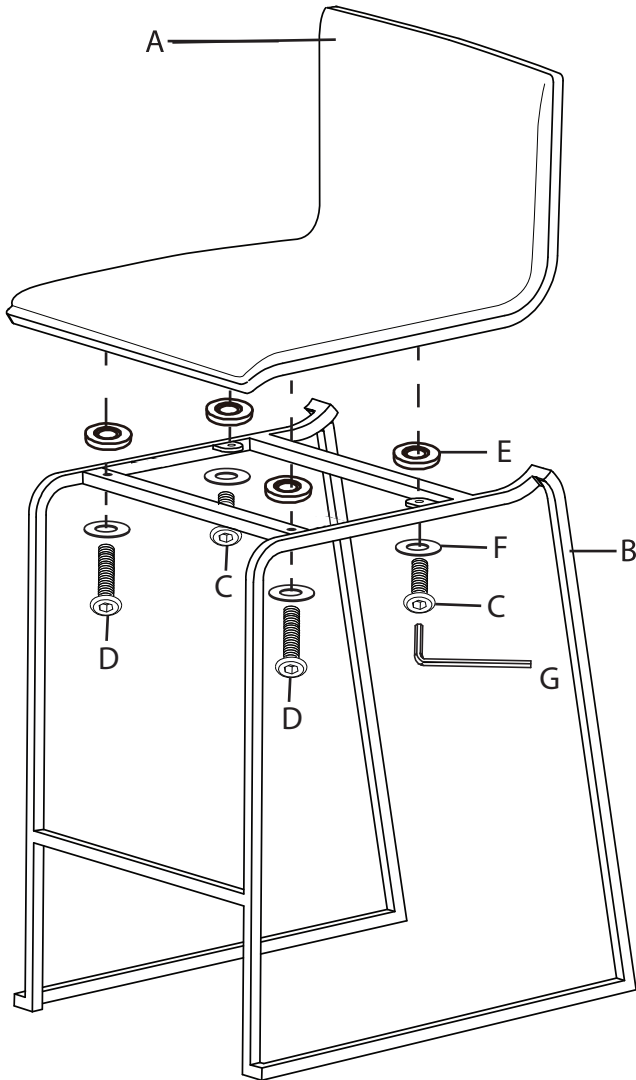

**2**

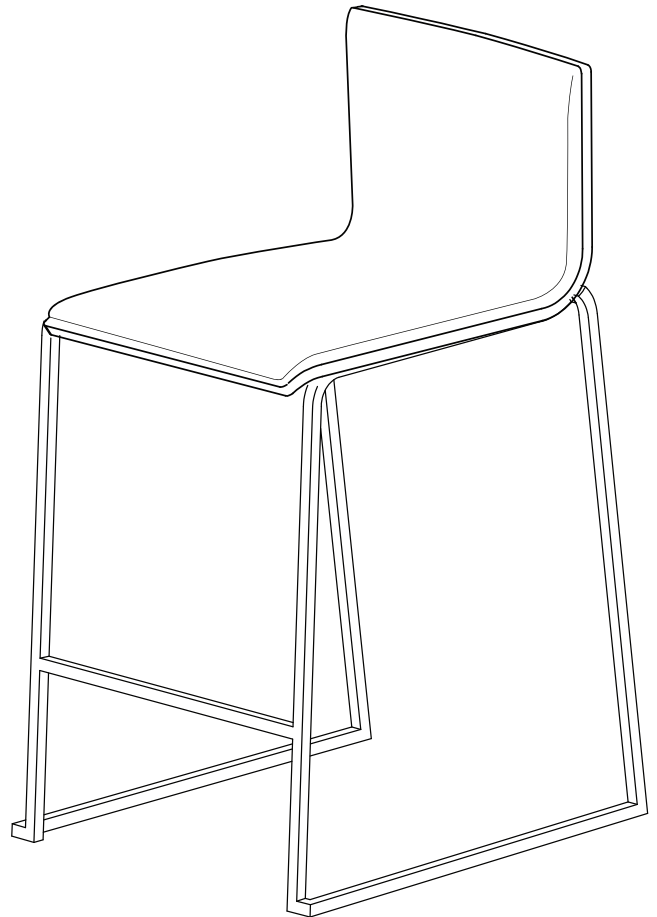

Do not over tighten.  
Do not use power tools to assemble.