

# ASSEMBLY INSTRUCTIONS


ITEM NO: SF90242

1. PUT THE LAMP BASE(A) ON FLOOR CAREFULLY.
2. FASTEN TUBE(B) ONTO LAMP BASE(A) CLOCKWISE, TUBE(C) ONTO TUBE(B) AND TUBE(D) ONTO TUBE(C).
3. FASTEN ARM ASSEMBLY(E) ONTO TUBE(D) CLOCKWISE.
4. BACK-OFF THE RING(F) FROM SOCKET, AND PUT SHADE(G) ONTO SOCKET
5. FINALLY, TIGHTEN THE RING(F).
6. PLEASE USE ON/OFF 60W BULB ON THE LAMP.  
(BULB NOT INCLUDED)

## IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER). AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET. REVERSE THE PLUG. IF IT STILL DOES NOT FIT. CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

**MADE IN CHINA**

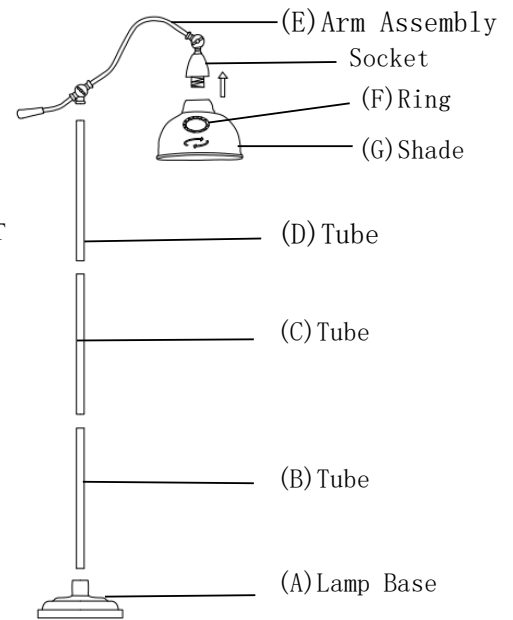

# ASSEMBLY INSTRUCTIONS

ITEM NO: SF90242

1. PUT THE LAMP BASE(A) ON FLOOR CAREFULLY.
2. FASTEN TUBE(B) ONTO LAMP BASE(A) CLOCKWISE, TUBE(C) ONTO TUBE(B) AND TUBE(D) ONTO TUBE(C).
3. FASTEN ARM ASSEMBLY(E) ONTO TUBE(D) CLOCKWISE.
4. BACK-OFF THE RING(F) FROM SOCKET, AND PUT SHADE(G) ONTO SOCKET.
5. FINALLY, TIGHTEN THE RING(F).
6. PLEASE USE ON/OFF 60W BULB ON THE LAMP.  
(BULB NOT INCLUDED)

## IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER). AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET. REVERSE THE PLUG. IF IT STILL DOES NOT FIT. CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

**MADE IN CHINA**

