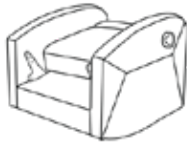


Part # RCL-DORMI XX

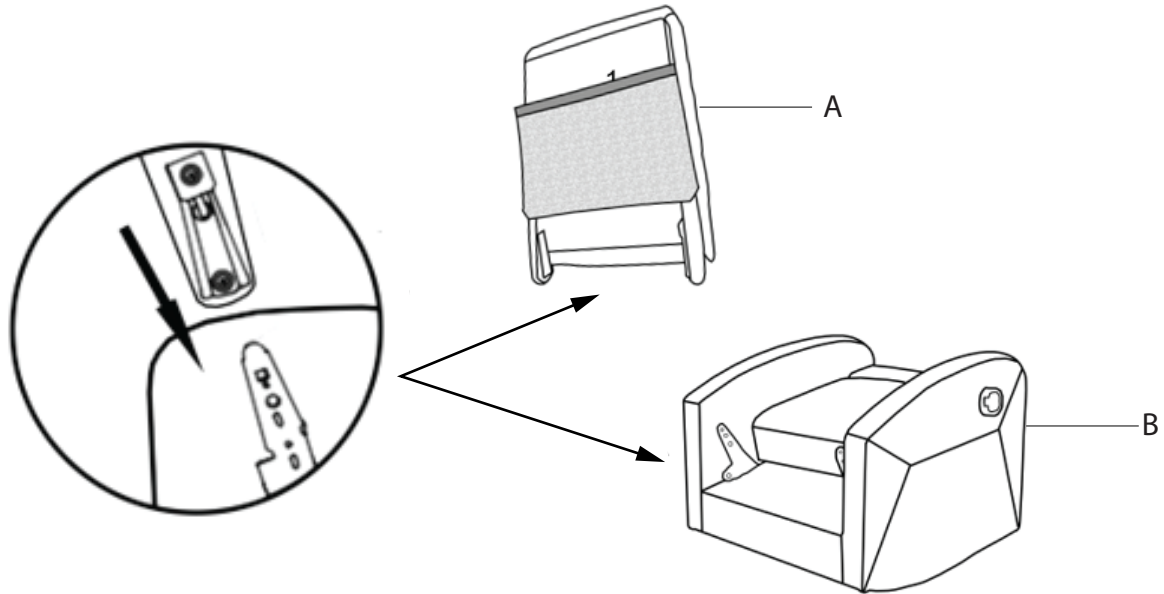
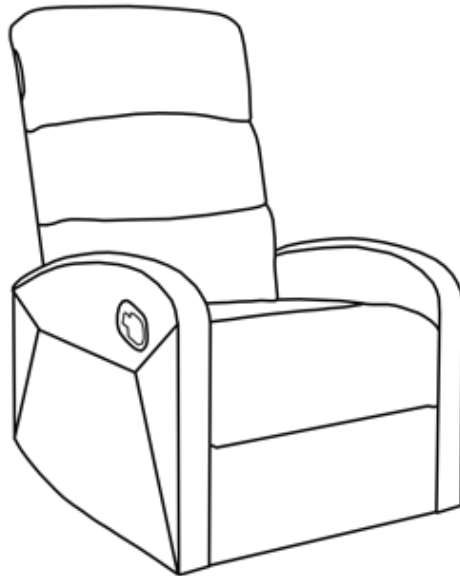
20-0430

**PARTS**

A



B

**1****2**

Do not over tighten.  
Do not use power tools to assemble.