

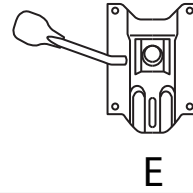
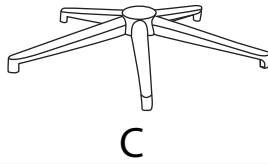


Vintage Mod Office Chair


Part # OC-VMO XX+XX

171211


PARTS

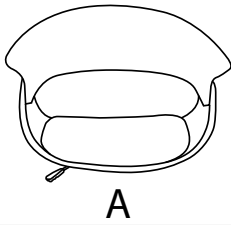


1

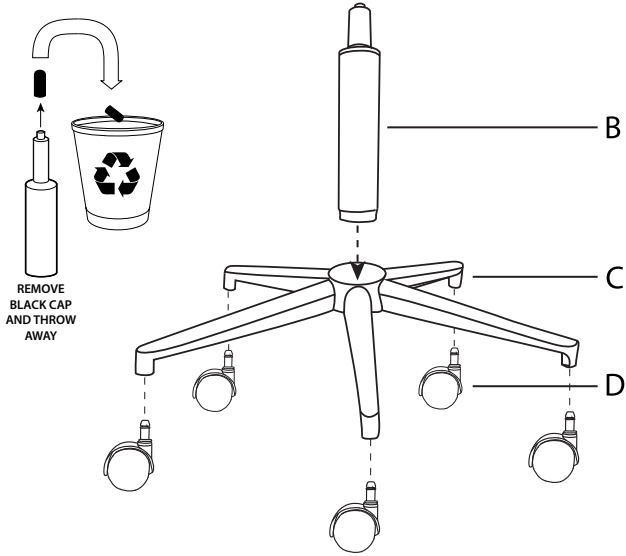


2

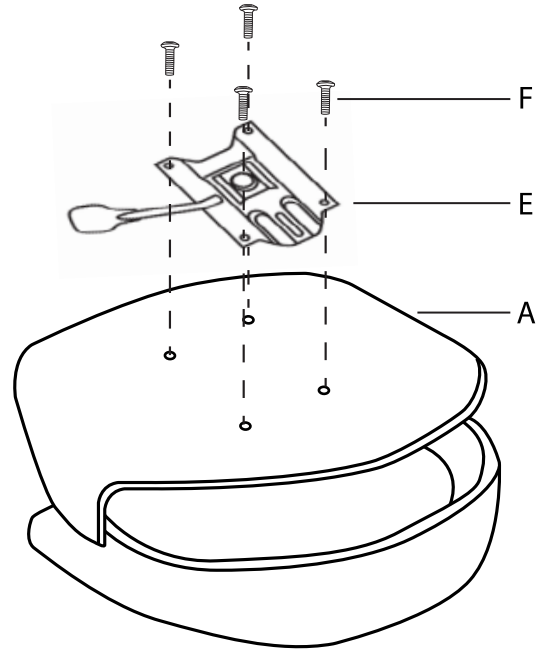

3

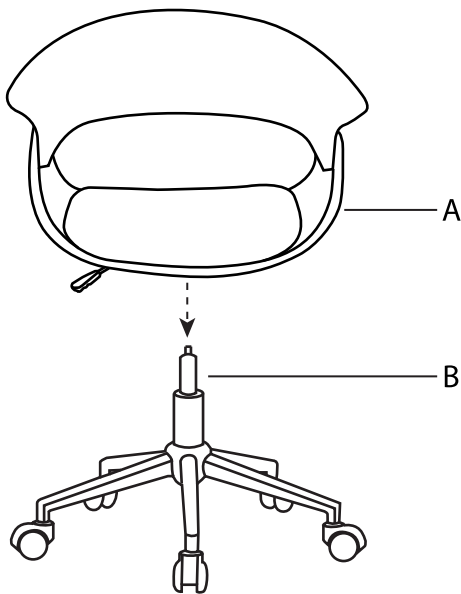

4

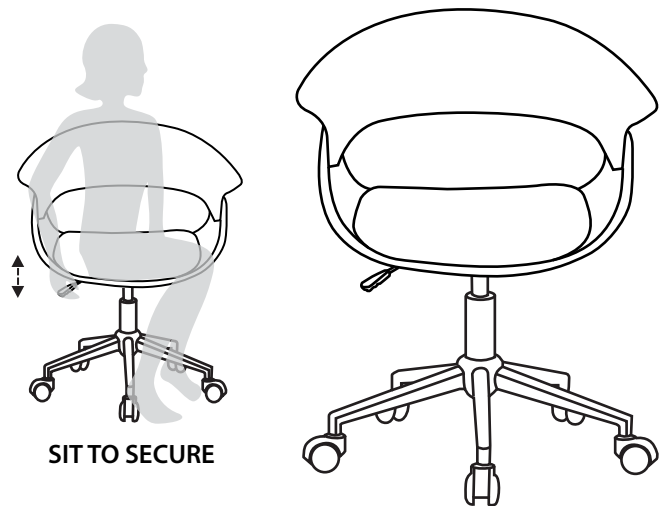

Do not over tighten.
Do not use power tools to assemble.